



Ersatzteile WE-56
 spare parts
 repuestos

Druckknopf kpl.
 press button cpl.
 botón de presión
 06993800




kein Ersatzteil
 no spare part
 no repuesto

Kopftrieb kpl.
 head gear cpl.
 piñón de cabezal cpl.
 07539000




Federscheibe
 spring washer
 arandela elástica
 03408900

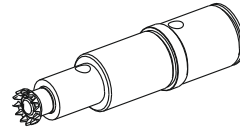

Mitteltrieb kpl.
 middle gear cpl.
 piñón de intermedio cpl.
 07250900



O-Ring
 o-ring
 junta tórica
 02307400

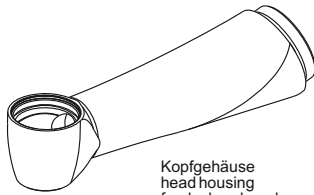

Kopfgehäuse
 head housing
 funda de cabezal
 07217700

Mitnehmer
 dog
 tope de arrastre
 01582300



Feder
 spring
 muelle de presión
 01360601



Kugellager
 ball bearing
 cojinete de bolas
 01577000

 


kein Ersatzteil
 no spare part
 no repuesto

Stift
 pin
 pasador
 01366400



Kugellager
 ball bearing
 cojinete de bolas
 05765800



Mitnehmertrieb kpl.
 lower shaft cpl.
 eje cpl.
 07476200

Welle
 shaft
 eje
 07510000

