



6 Check and adjust

6.1 Check and adjust the compressed air input

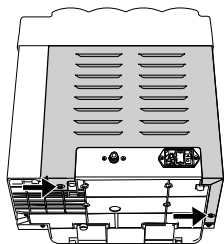

- ▶ Remove the two Torx 3x10 screws, and remove the rear wall from the device.

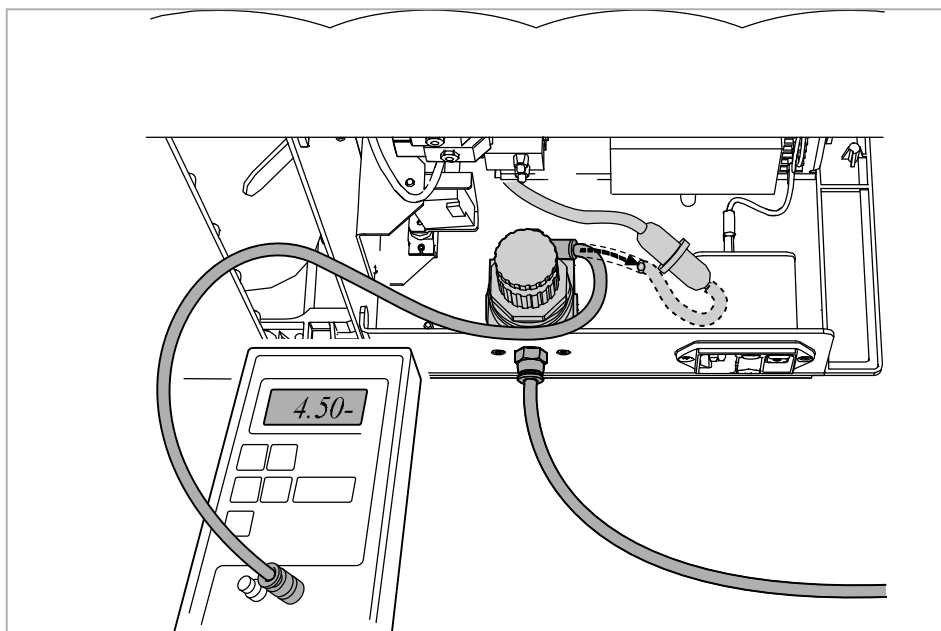

- ▶ Separate the compressed air connection between the compressed air filter and the pressure controller at the swivel banjo coupling of the pressure controller.
- ▶ Connect the digital manometer with the swivel banjo coupling.
- ▶ Connect the compressed air supply.
- ▶ Compare the display on the digital manometer with the specification 4.5 ± 0.2 bar (65 ± 3 psi). If necessary, adjust the pressure setting on the pressure controller.
- ▶ Restore the hose connection filter – pressure controller.
- ▶ Re-attach the back wall.