



\$+\$*

RESTORE
DEFAULT



\$+

ENTER CONFIGURATION



CP0

Interface RS232



AD0

Disable Codabar code



AI11

Enable code 128



AI21

Enable EAN-128



\$-

Exit and Save configuration