


Figure 10-22 Removing the Power I/O Box

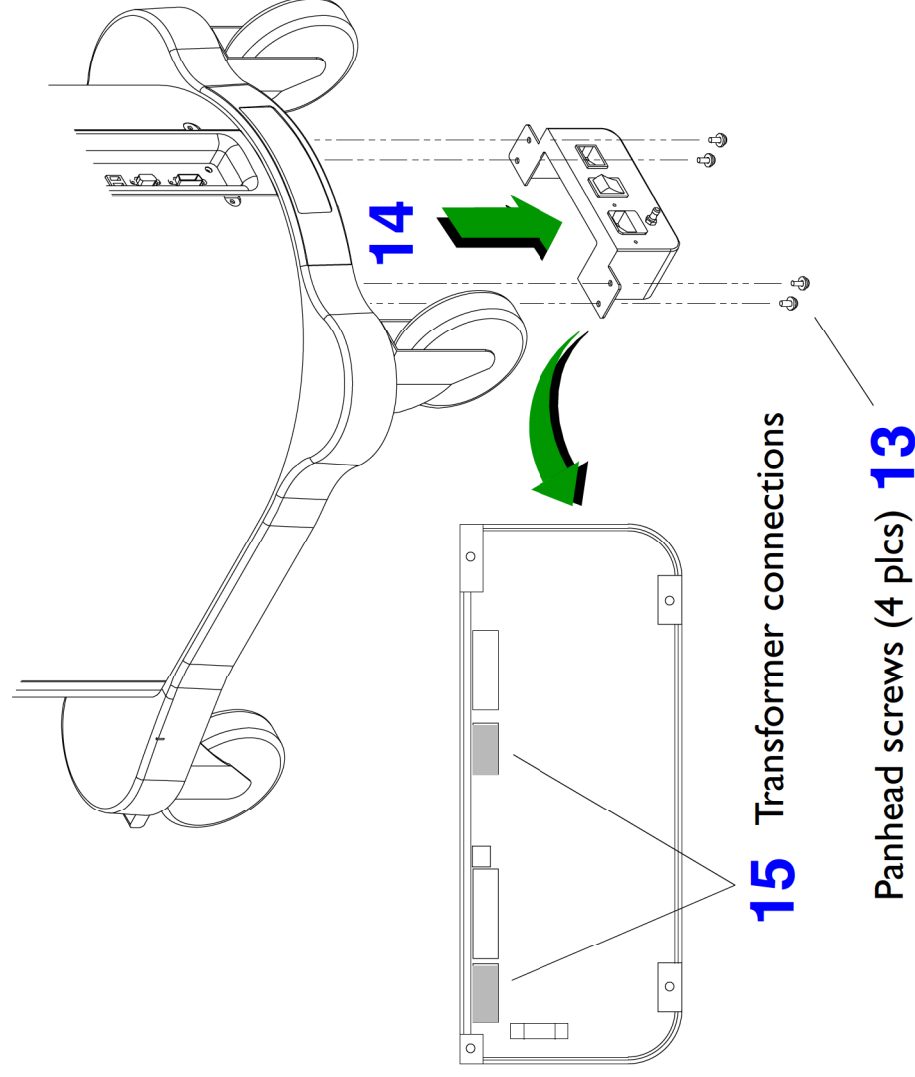

- I3. Remove the four screws securing the power I/O box to the cart frame.
- I4. Slide the transformer back as you lower the power I/O box away from the underside of the system.
- I5. Disconnect the two transformer cable connections from the backside of the power I/O box. Only disconnect these two cables.