

BL800K-Parts Enumeration

PART LIST			
NO.	NAME	Q'TY	P/N
1	NOSE CAP COVER	1	BL800K-11005
2	DUST SEAL	1	BL800K-11006
3	SEAL COVER	1	BL800K-11009
4	DUST COLLECTOR	1	BL800K-11007
5	NOSE CAP	1	BL800K-11001
6	O-RING	1	BL800A-11003
7	TEST BAR	1	NX100S-10211
8	COLLET CHUCK	1	BL800K-11311
9	COLLET CHUCK CASE	1	BL800A-11301
10	BALL BEARING	1	BL800A-11304
11	BEARING STOPPER	2	BL800A-11305
12	BEARING COVER	1	BL800A-11306
13	CONICAL SPRING	19	BL800A-11309
14	CAM PUSHER	1	BL800A-11310
15	CAM PIN	1	BL800A-11314
16	SPINDLE BUSH	1	BL800K-11330
17	SPINDLE WAVE WASHER	1	BL800A-11328
18	COLLET CHUCK JOINT	1	BL800K-11320
19	O-RING	2	BL800A-11323
20	DELFIN JOINT	1	BL800A-11322
21	BALL GUIDE STOPPER	1	BL800A-11002
22	HAND CAP COVER	1	BL800A-11101
23	CAM	1	BL800K-11201
24	BALL	2	BL800A-11211
25	BALL RIM	2	BL800A-11212
26	O-RING	1	BL800A-11202
27	BALL GUIDE INNER	1	BL800A-11205
28	HANDLE SPRING	1	BL800A-11206
29	BALL BEARING	1	BL800A-11208
30	BODY RING	1	BL800K-12002
31	MOTOR CASE COVER	1	BL800A-12001
32	MOTOR ASSY	1	BL800A-12100
33	CORD ASSY	1	BL800A-13000
34	SPINDLE ASSY	1	BL800A-11300
35	HEAD ASSY	1	BL800A-11000
36	BODY ASSY	1	BL800A-12000

