

Instructions for removing the door panel

Tools required: Torx key TX20, Socket Allen key 3 mm



WARNING

Some components of the power electronics and other components remain live even after the power switch has been switched off. Remove the mains plug.

1. Remove the semi-circular cover on the door interior panel by removing both Torx screws (Fig. 1).



Fig. 1

2. Remove both Torx screws for fixing the locking slider on the inside of the door (Fig. 2) and remove the locking slider from the door exterior. Pay attention to the spacer plates, which are hanging loose on the retaining collars (Fig. 3, detail).



Fig. 2

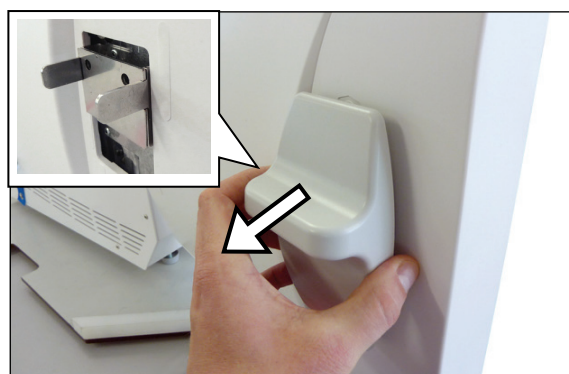


Fig. 3

The door panel is fixed to the door interior by the four screws.

3. Use the socket Allen key to loosen the upper and lower hexagon screws slightly and remove the plastic door panel forwards.

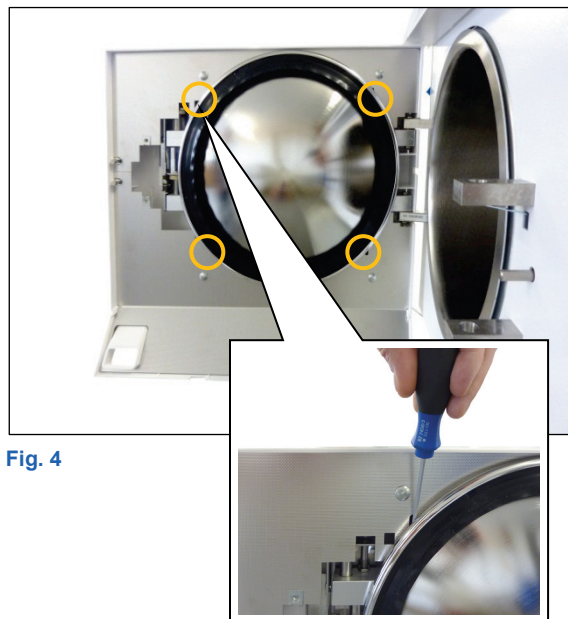


Fig. 4

Fig. 5 shows the door without the plastic door panel.

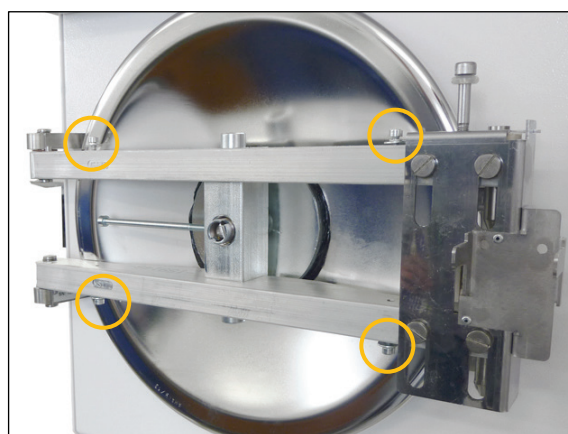


Fig. 5