



REFER TO PAGE 5 FOR LOGIC LEVELS,  
NOTES, ETC, REFERENCED BY  
HEXAGONAL SYMBOL: ○

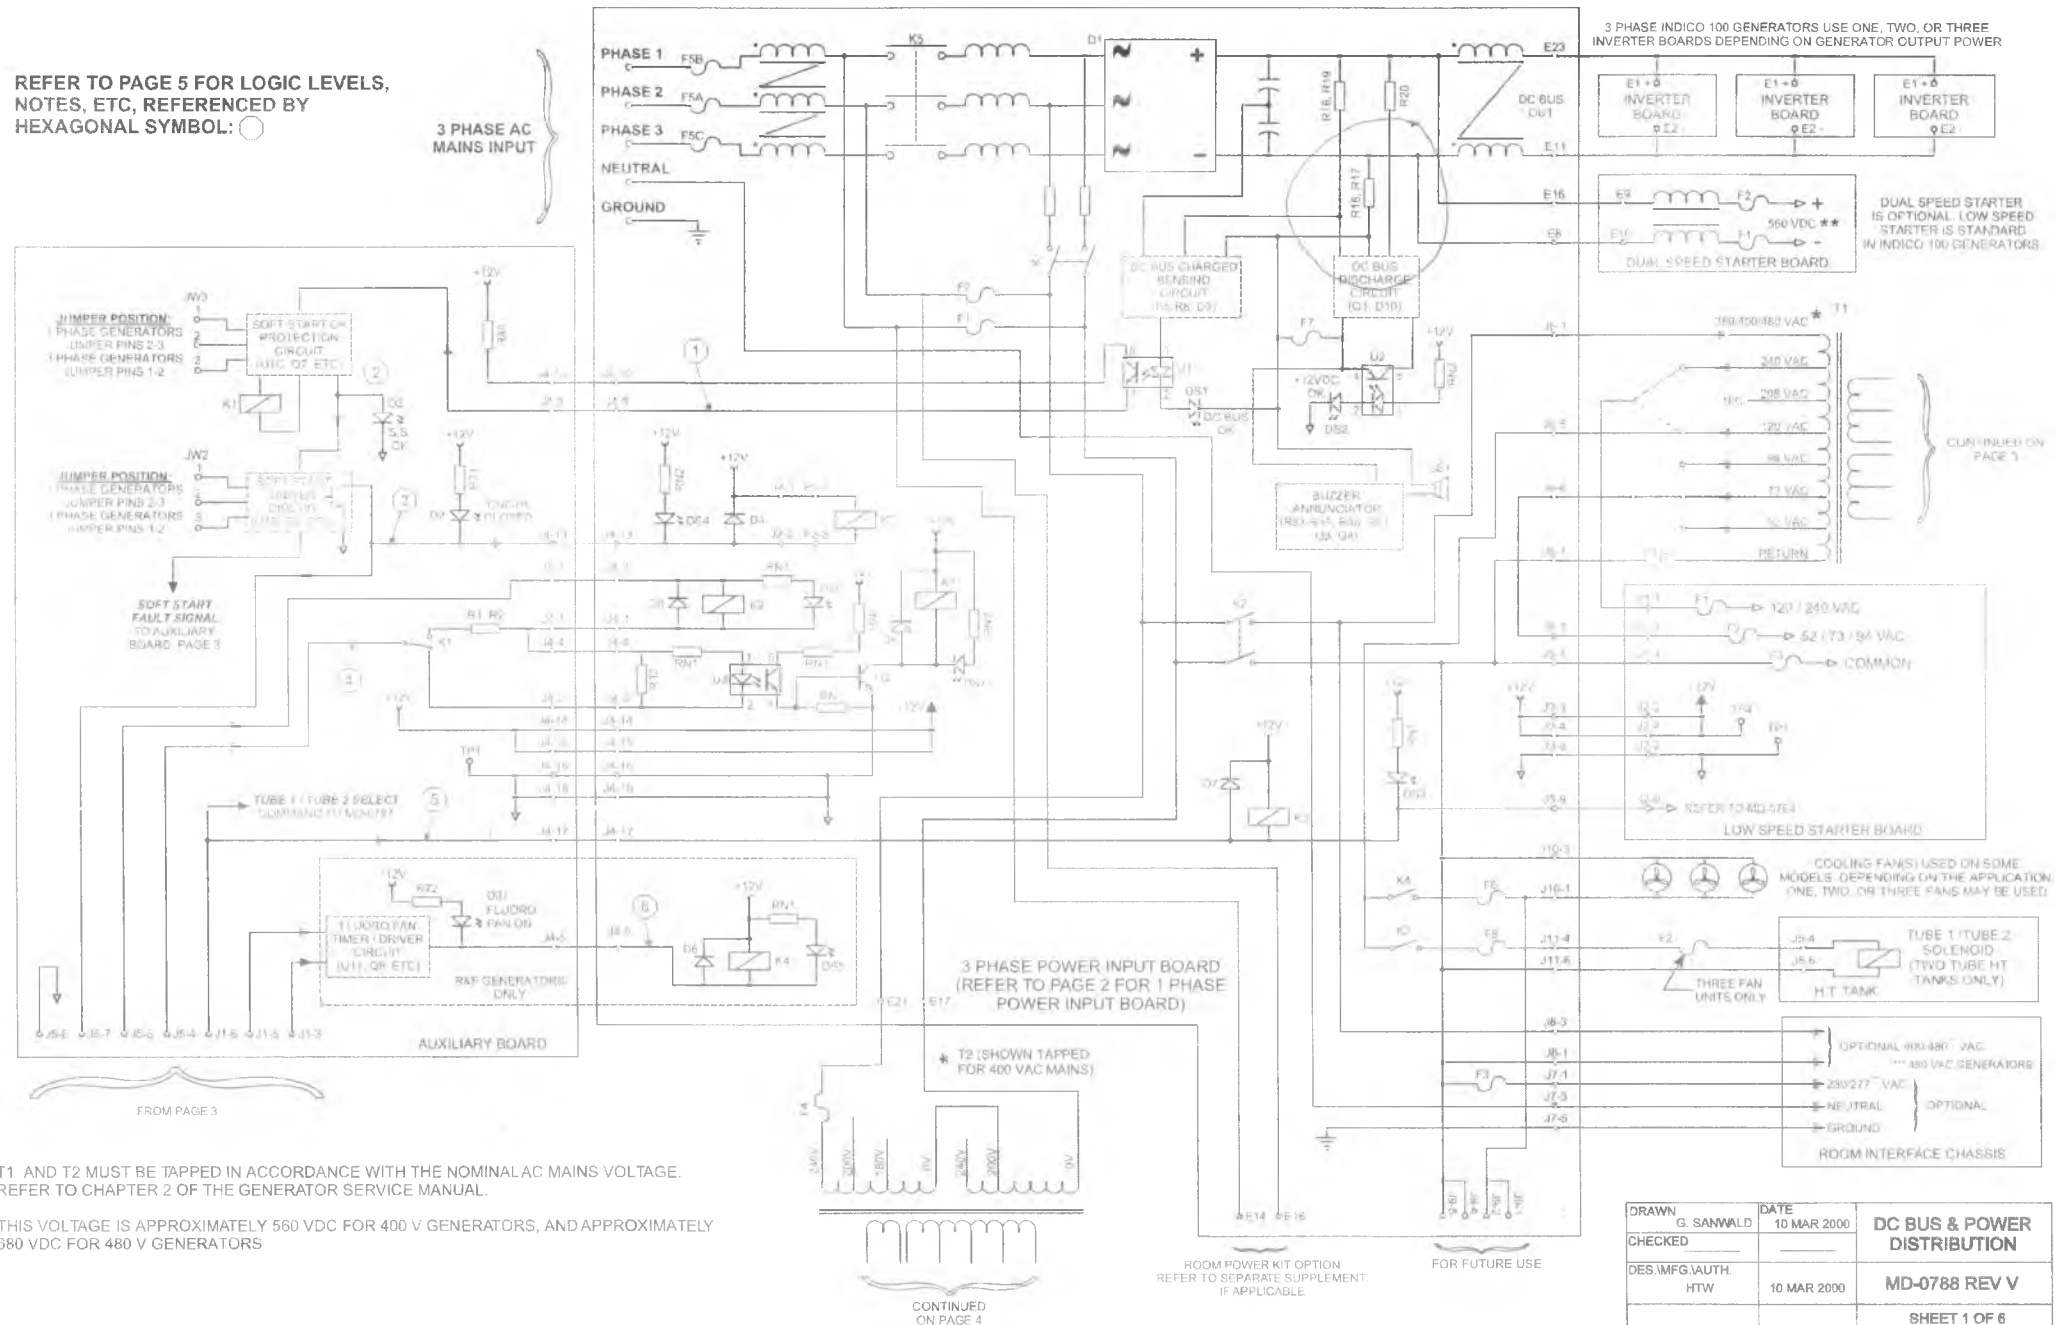

\* T1 and T2 must be tapped in accordance with the nominal AC mains voltage. Refer to Chapter 2 of the Generator Service Manual.

\*\* THIS VOLTAGE IS APPROXIMATELY 560 VDC FOR 400 V GENERATORS, AND APPROXIMATELY 680 VDC FOR 480 V GENERATORS

3 PHASE AC  
MAINS INPUT

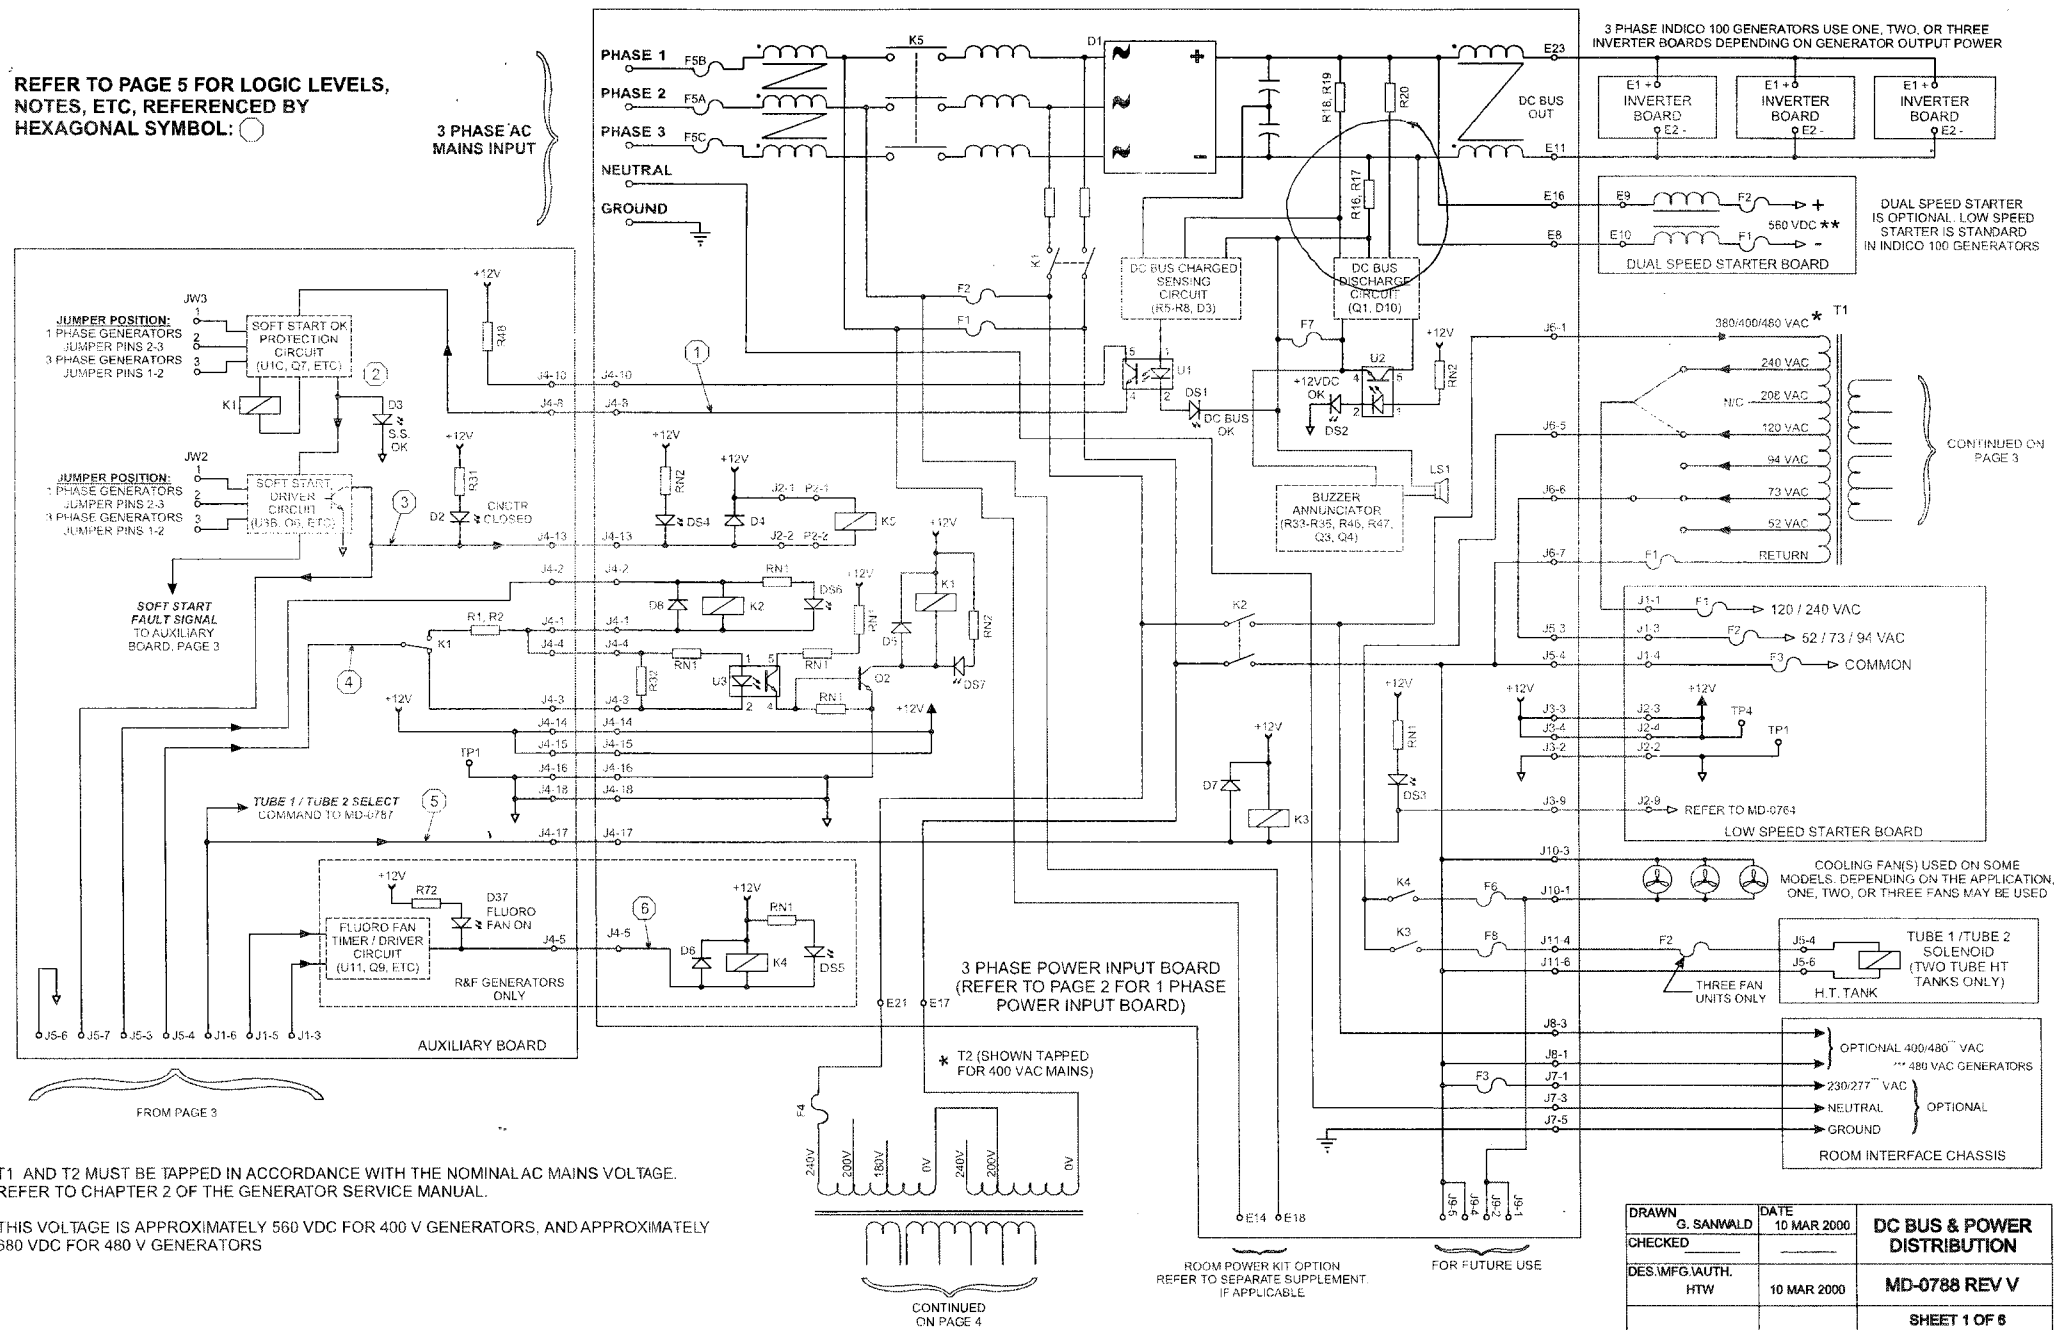

Use and disclosure is subject to the restrictions on the title page of this CPI document

