

Data Error

Error Code	Meaning	Possible Cause	Action
D501	Data in the DRAM or flash memory is not read out correctly (summation error).	Faulty DRAM or flash memory.	Replace the main board.
D511	When the power is turned on, settings in the System Maintenance screen do not match the backup data in the flash memory.	After settings in the System Maintenance screen are changed, the “Flash Save” procedure is not performed. During power off sequence, power down occurs.	Perform the “Flash Save” procedure in the System Maintenance screen. Delete the report data in the System Setup screen.
		Faulty main board.	Replace the main board.
D512	When the power is turned on, damaged waveform report data in the flash memory is detected.	During power off sequence, power down occurs. Faulty main board.	Delete the report data in the System Setup screen. Replace the main board.

Pacing (TEC-7631/7731 Series Only)