



## Connecting the Laptop Computer to the Imager

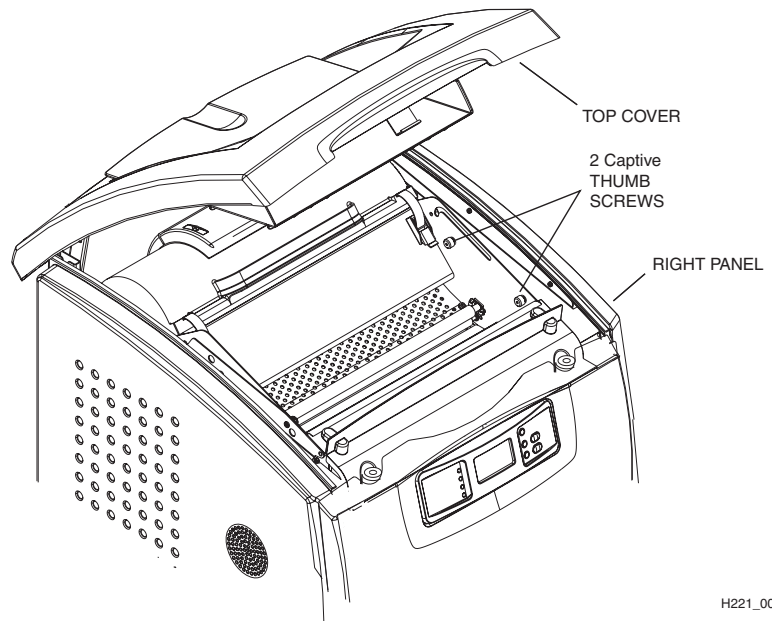

To connect the laptop computer to the 5800/5850 Laser Imagers:

1. Open the TOP COVER.
2. Loosen the 2 Captive THUMB SCREWS.
3. Remove the RIGHT PANEL.

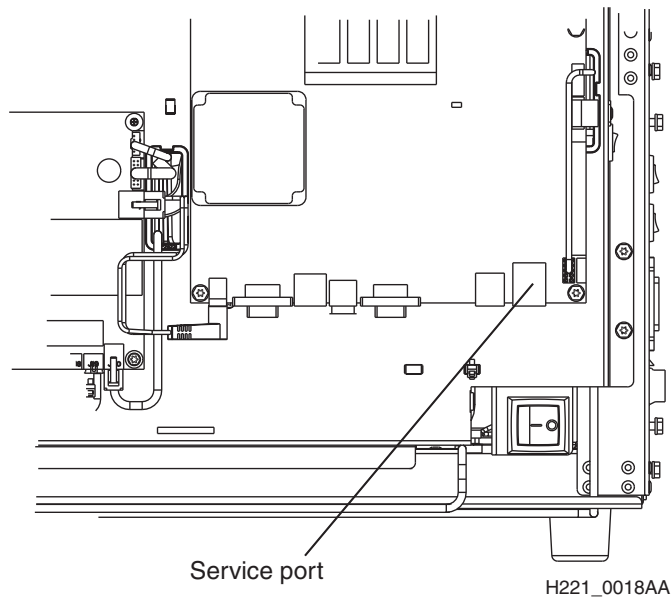

4. Connect one end of the CROSSOVER CABLE to the LAPTOP COMPUTER and the other end to the service port on the Imager.