



### 3. DISASSEMBLY PROCEDURE

**Caution:** Please work on a clean table, since component: Magnet Shaft Assy is magnetized.


3-1. Take out the Gasket (for M4/B2 types). When assembling, please replace with the new one if damaged.

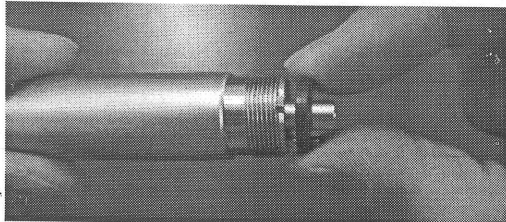

3-2. Disassembling the Joint Ring / Guide Retaining Nut  
Attach Joint Ring / Guide Retaining Nut Tightening Tool to the Vise.

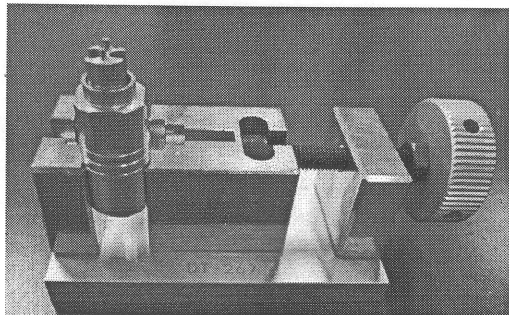

Attach handpiece to the tool.

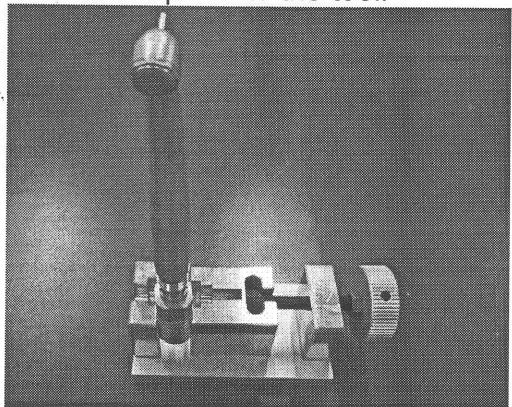

Align and match the position of tool's convex part to the handpiece's concave part. While holding the handpiece in position (pushing the handpiece to the tool), loosen the Joint Ring / Guide Retaining Nut. Caution: Internal parts will be damaged if not holding the handpiece in position.

