

7 Adjustments

Monitor Adjustment

The four buttons on the front of the monitor adjust brightness and contrast. When the two right buttons are pressed simultaneously as the monitor powers up, the OSD **Main Menu** is available. Submenus of the OSD **Main Menu** control the size and geometry of the display and set the monitor's signal input voltage (see [“Changing the Monitor Signal Voltage” on page 103](#)).

Pressing the two right buttons together degausses the CRT.

OSD Main Menu

➤ To open the **OSD Main Menu**

1. Disconnect the power cord from the rear of the monitor.
2. Press the two right-hand monitor buttons, and hold them in while reconnecting the power cord.
3. Press the two center monitor buttons.

NOTE Do not press the two center buttons for longer than 10 seconds or the OSD menu locks and you will not be able to make any adjustments. To unlock the menu, press the two center buttons for more than 10 seconds or until the unlocked message appears and then release the buttons. Press the buttons again until the **Main Menu** appears.

The **OSD Main Menu** is displayed.

