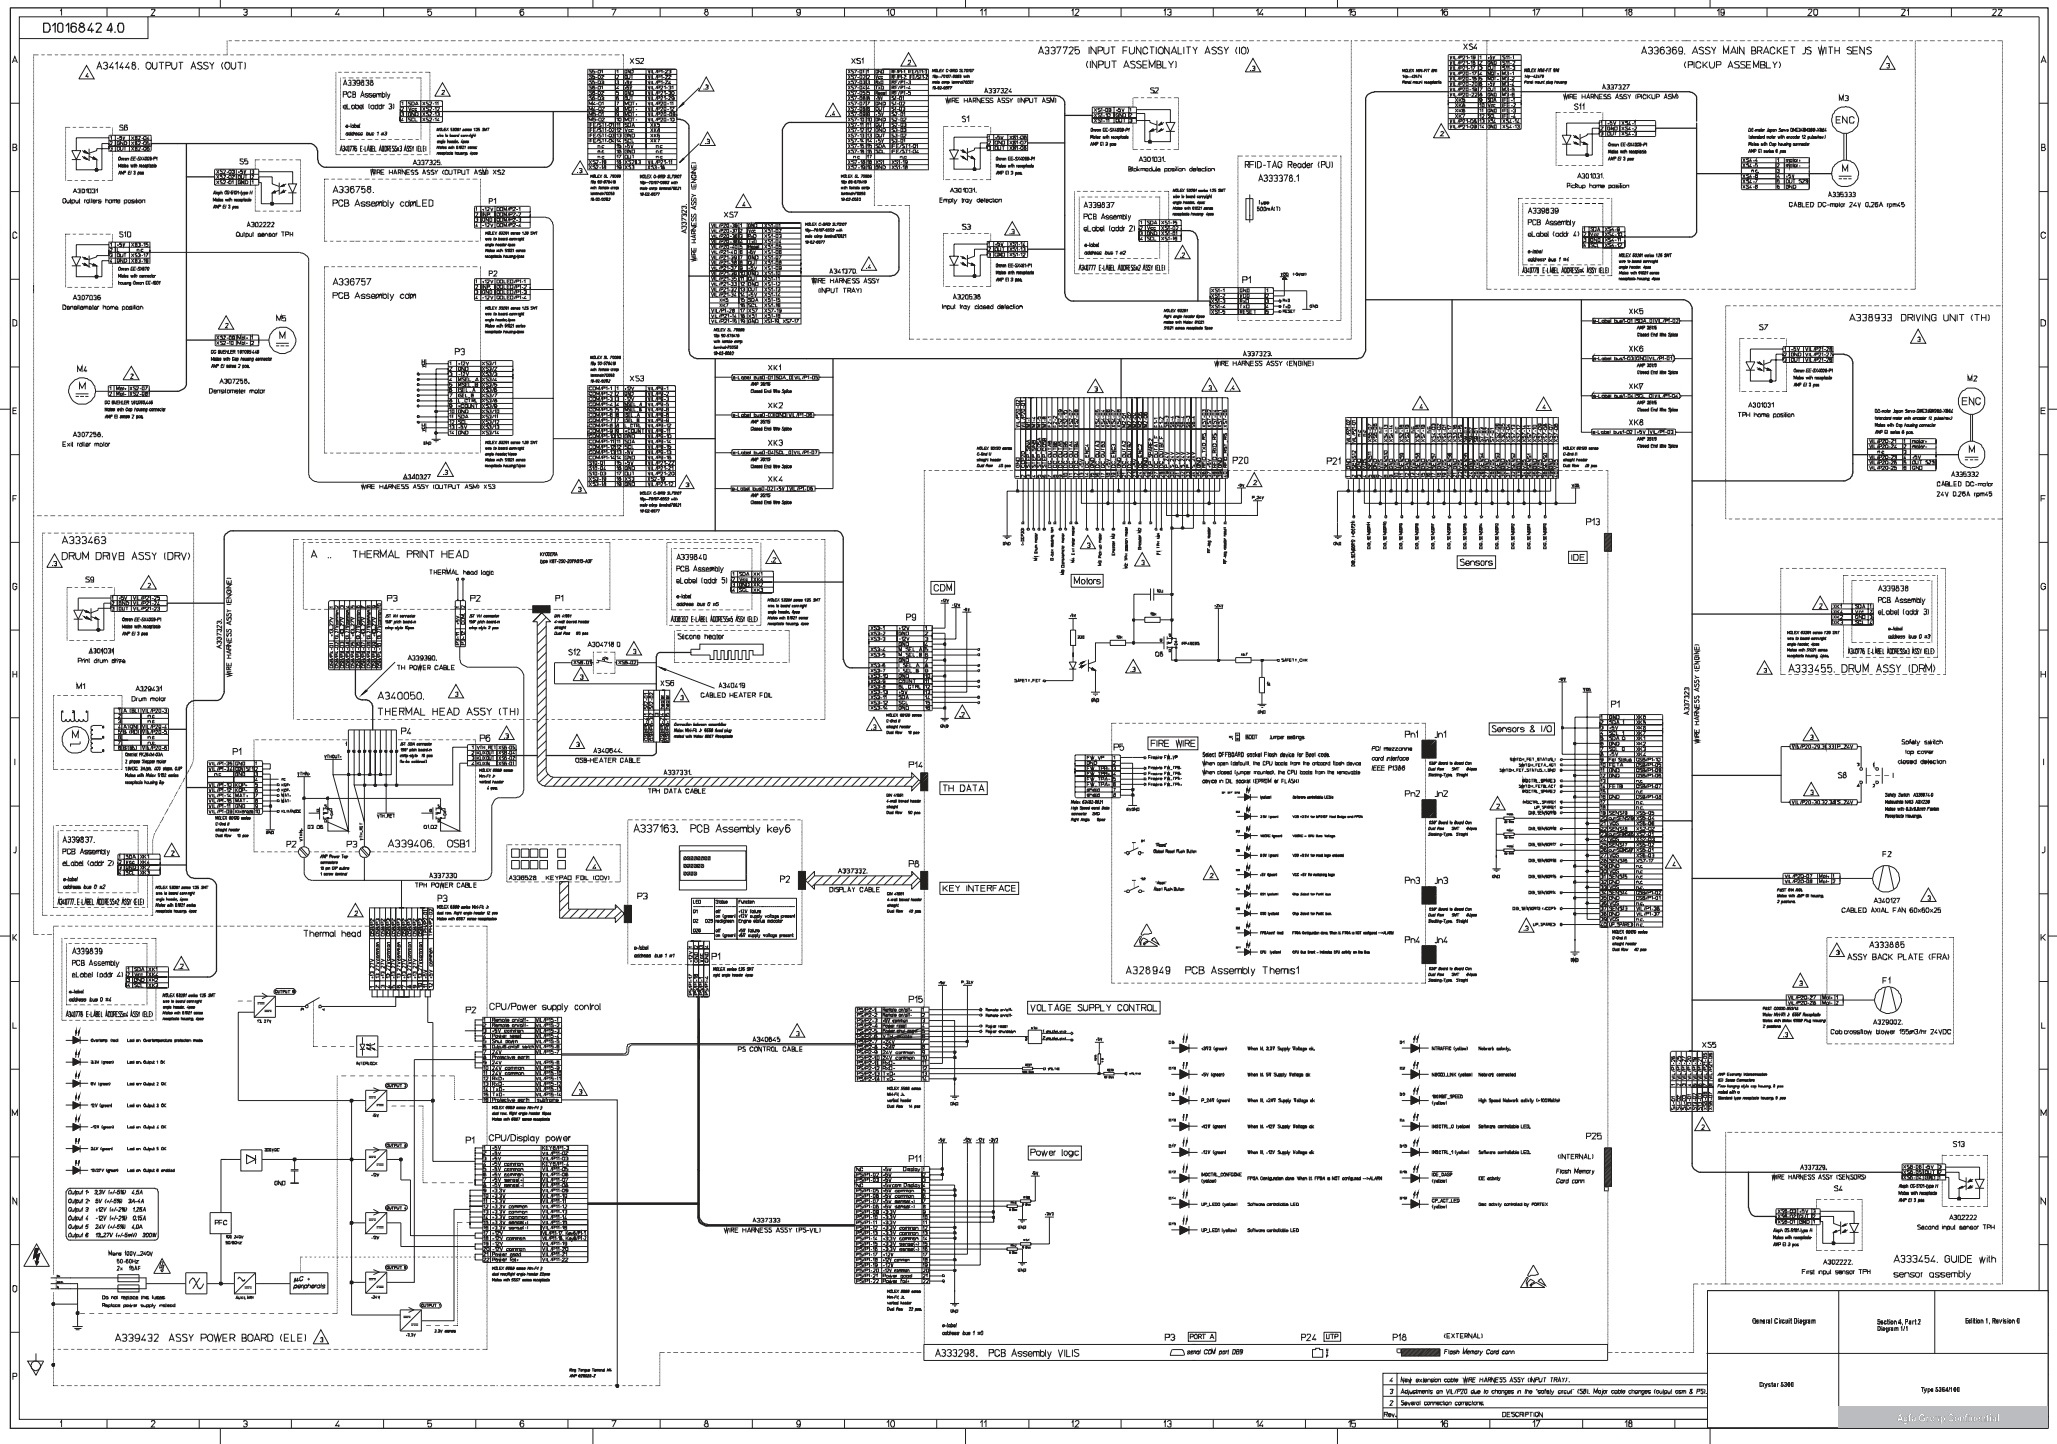
D1016842 4.0
A341448. OUTPUT ASSY (OUT)
A337725 INPUT FUNCTIONALITY ASSY (IO)
(INPUT ASSEMBLY)
A336369. ASSY MAIN BRACKET JS WITH SENS
(PICKUP ASSEMBLY)
A338933 DRIVING UNIT (TH)
A333463
DRUM DRIVE ASSY (DRV)
A340050.
THERMAL HEAD ASSY (TH)
A339432 ASSY POWER BOARD (ELE)
A333298. PCB Assembly VILIS
A328949 PCB Assembly Therms1
A333455. DRUM ASSY (DRM)
A333454. GUIDE with
sensor assembly
Motors
Sensors
IDE
Sensors & I/O
CDM
TH DATA
KEY INTERFACE
VOLTAGE SUPPLY CONTROL
Power logic
FIRE WIRE
CPU/Power supply control
CPU/Display power
Thermal head
WIRE HARNESS ASSY (ENGINE)
WIRE HARNESS ASSY (INPUT ASSM)
WIRE HARNESS ASSY (INPUT TRAY)
WIRE HARNESS ASSY (OUTPUT ASSM) XS2
WIRE HARNESS ASSY (OUTPUT ASSM) XS3
WIRE HARNESS ASSY (PICKUP ASSM)
WIRE HARNESS ASSY (SENSORS)
WIRE HARNESS ASSY (PS-VIL)
TH POWER CABLE
TPH DATA CABLE
TPH POWER CABLE
DISPLAY CABLE
PS CONTROL CABLE
CABLED HEATER FOIL
CABLED AXIAL FAN 60x60x25
CABLED DC-motor 24V 0.26A rpm45
Second input sensor TPH
First input sensor TPH
Cabcrossflow blower 155m3/hr 24VDC
Output rollers home position
Output sensor TPH
Densitometer home position
Densitometer motor
Exit roller motor
Print drum drive
Drum motor
Input tray closed detection
Empty tray detection
Bin-module position detection
RFID-TAG Reader (PU)
A333376.1
Pickup home position
TPH home position
Safety switch top cover closed detection
Flash Memory Card conn
(INTERNAL)
Flash Memory Card conn
Section 4, Part 2 Diagram 1/1
Edition 1, Revision 0
Crystar 5360
Type 5364/100